


I-Sniper Slim Vandalproof Dome Camera


INSTRUCTION MANUAL

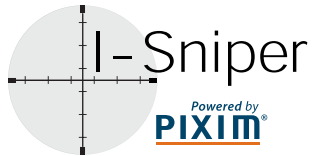

• EL-430

Dear Customers!

By selecting this product, you have decided to use a professional device that guarantees highest quality and reliability. We would like to thank you very much for your confidence and kindly ask you to read the following instructions carefully before installation and operation in order to take full advantage of all quality features regarding this product.

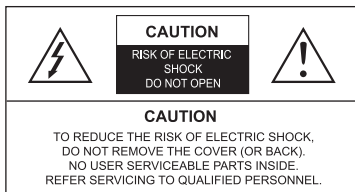

The lighting flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

INFORMATION

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at its own expense.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

CAUTION – To prevent electric shock and risk of the fire hazards

- Do NOT use power source other than that specified.
- Do NOT expose this appliance to rain or moisture.

This installation should be made by a qualified service person and should conform to all local codes.

Table of contents

1. Precautions	4
2. Limitation of liability	5
3. Disclaimer of warranty	5
4. Package	6
5. Installation	7~9
5-1. Opening the dome	
5-2. Varifocal Lens adjustment	
5-3. Installation overview	
(1) Ceiling mount	
(2) Wall or Slope mount	
6. Name and function of each part.....	10
7. OSD Key	10
7-1. Setting up the menu	
7-2. Cable Connection	
8. Functions and operation	11~14
8-1. OSD Menu Tree	
8-2. Setting up the menu	
1. WDR CONTROL	
2. BLC	
3. AGC	
4. WHITE BALANCE	
5. FLUORESCENT	
6. ICR DVR TOLL	
7. RS-485..	
8. FLIP	
9. SAVE&EXIT	
10. DEFAULT	
11. CANCEL	
9. Troubleshooting	15~16
10. Dimension	16
11. Specification	17

1. Precautions

- Please read the manual carefully before the installation in order to set up the camera correctly and to obtain the best picture quality.
- Please keep the manual in good condition for your future reference and service application.
- Installation and services should be only carried out by an authorized personnel according to local safety regulations.
- If any liquid or solid matter gets into the housing, immediately disconnect the camera from power supply and have it checked by your authorized dealer before reusing.
- Avoid installing the camera at extremely hot or cold places.
- If you are not a certified person, never try to dismantle the camera. To avoid electric shock, never remove the screws or covers. There are no parts inside that need maintenance by the user. All maintenance should be carried out by qualified personnel.
- Avoid installing the camera at a place of high humidity.
- Avoid installing the camera at the place exposed to gas or oil.
- Keep the top glass of the lens always clean in order to obtain the best picture quality all the time. Be careful not to be stained by fingerprint.
- Please give a special attention to keep the unit from dangerous drop or external shock during the process of transportation or handling.
- Never try to touch the camera in wet hand. It may cause an electric shock.
- Do not expose the camera to radioactivity. It causes a serious damage on the Sensor.

2. Limitation of liability

This publication is provided "AS IS" without warranty of any kind, either express or implied, including but not limited to, the implied warranties of merchantability, fitness for any particular purpose, or non-infringement of the third party's right. This publication could include technical inaccuracies or typographical errors. Changes are added to the information herein, at any time, for the improvements of this publication and/or the corresponding product(s).

3. Disclaimer of warranty

 
In no event shall seller be liable to any party or any person, except for replacement or reasonable maintenance of the product, for the cases, including but not limited to below:

- (1) Any damage and loss, including without limitation, direct or indirect, special, consequential or exemplary, arising out of or relating to the product;
- (2) Personal injury or any damage caused by inappropriate use or negligent operation of the user;
- (3) Unauthorized disassemble, repair or modification of the product by the user;
- (4) Inconvenience or any loss arising when images are not displayed, due to any reason or cause including any failure or problem of the product;
- (5) Any problem, consequential inconvenience, or loss or damage, arising out of the system combined by the devices of third party.
- (6) Any claim or action for damages, brought by any person or organization being photogenic subject, due to violation of privacy with the result of that surveillance—camera's picture, including saved data, for some reason, becomes public or is used for the purpose other than surveillance.


4. Package




I-Sniper
Vandalproof Dome Camera
1EA



Instruction manual
1EA

 


Extra Video output cable
1EA

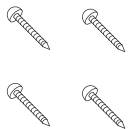

Tapping screws
4EA



 Plastic anchor
4EA




Drilling template
1EA



Star Wrench
1EA

 [Option]




Adaptor plate
1EA



Fixed Screws
4EA


5. Installation

5-1. Opening the dome

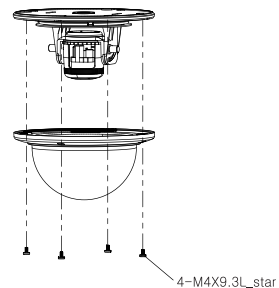

- ① Separate the Dome-Assy by loosening the four screws on the Dome-Assy.

5-2. Varifocal Lens adjustment

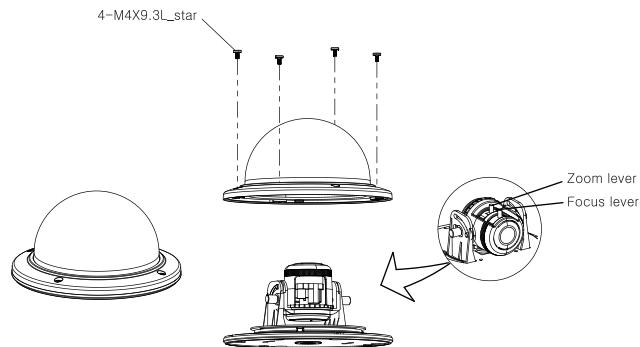


- ① Separate the Dome-Assy by loosening the four screws on the Dome-Assy.
- ② Rotate the camera/lens assembly to the desired position.
- ③ Adjust Zoom and Focus using the zoom/focus levers on the lens.
- ④ Zoom
 - Unlock the zoom lever.
 - Move the lever to adjust the zoom.
- ⑤ Focus
 - Unlock the focus lever.
 - Move the lever to adjust the focus.

5. Installation

5-3. Installation overview


(1) Ceiling mount

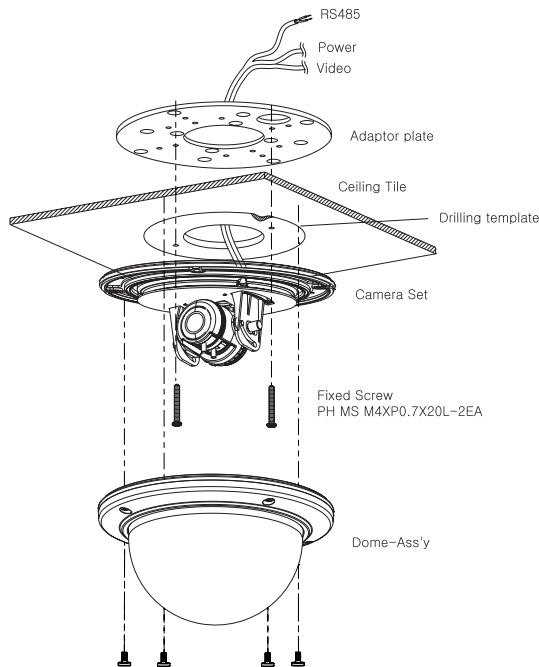

- ① Affix the Drilling Template (supplied) on the ceiling and drill two holes on the screw points.
- ② Put the Adaptor Plate on the Ceiling Tile and fix the Camera Set with the Adaptor Plate using Fixed Screws (supplied).
- ③ Rotate the camera/lens assembly to the desired position and tighten loosely the four screws on the Dome-Ass'y using the L-Wrench (supplied).
- ④ Adjust the dome cover according to the position of the camera and tighten tightly the four screws on the Dome-Ass'y tight using the L-Wrench.


5. Installation

(2) Wall or Slope mount

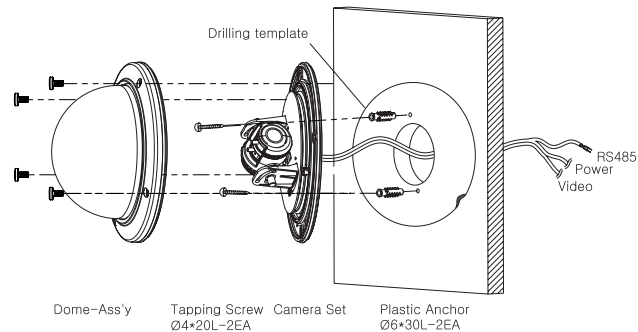


- ① Affix the Drilling Template (supplied) on the wall and drill two holes on the screw points.
- ② Fix Plastic Anchors (supplied) in the holes.
- ③ Fix the Camera Set using Tapping Screws (supplied).
- ④ Rotate the camera/lens assembly to the desired position and tighten loosely the four screws on the Dome-Ass'y using the L-Wrench (supplied).
- ⑤ Adjust the dome cover according to the position of the camera and tighten tightly the four screws on the Dome-Ass'y using the L-Wrench.

6. Name and function of each part

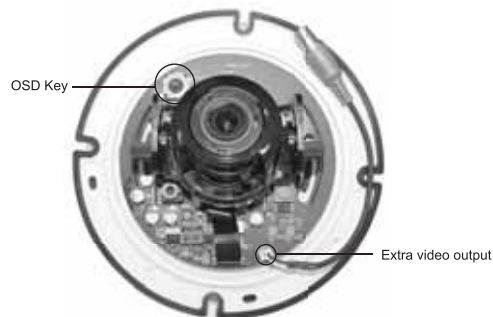


7. OSD Key

7-1. Setting up the Menu

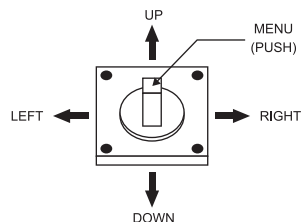

7-2. Cable Connection

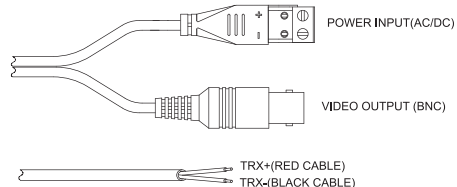

8. Functions and operation

8-1. OSD Menu Tree

I-SNIPEr					
WDR CONTROL	LOW	NORMAL	MIDDLE	HIGH	
BLC	OFF	ON			
AGC	LOW	NORMAL	HIGH		
WHITE BALANCE	ATW	AWB..			
FLUORESCENT	OFF	CRR	CRR2		
ICR DVR TOOL	OFF	EDGE SERIES	MAX SERIES	FLEX SERIES	ELITE SERIES
RS-485..	CAMERA #	PROTOCOL	BAUD RATE	RETURN.	
FLIP	OFF	BOTH	VERT	HORIZ	
SAVE&EXIT	DEFAULT	CANCEL			

8-2. Setting up the menu

1.WDR(Wide Dynamic Range) CONTROL

Light level is controllable with provided easy-to-use OSD menu that enables the camera to be ideally Set up for the most of different levels of backlit or contrast lighting situations.

LOW : Dynamic range level similar to that of CCD cameras.
 NORMAL : Suitable for most indoor scenes without windows or difficult lighting.


MIDDLE : Suitable for normal outdoor scenes and indoor scenes that include windows.

HIGH : Maximum setting for harsh outdoor scenes.



2.BLC(Back Light Compensation)


OFF : Highlights in image are prioritized.
 ON : Shadows in image are prioritized.

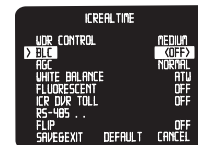

8. Functions and operation

3.AGC(Auto Gain Control)


LOW : Low gain limit.
NORMAL : Normal gain limit.
HIGH : High gain limit.

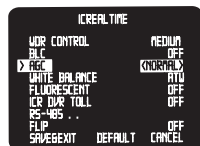

4.White Balance

The Automatic White Balance provides an extensive Range color temperature control that covers from 2,000°K to 11,000°K generating natural color image without Being red or blue in varying light conditions.

ATW : Auto-tracking white balance mode.
AWB : Set white balance now and lock it.

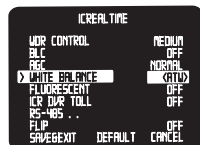


5.Fluorescent

Color Rolling Reduction.

OFF : Not used CRR.

CRR : This color roll reduction mode will work with manual and auto-iris lenses. However, using it with auto-iris lenses typically results in noticeable levels of noise in shadows or dark areas in the image.


CRR2 : This color roll reduction mode works with auto-iris lenses only.
Noise levels are reduced in shadows or dark areas in the image compared to the noise levels present when using the CRR mode, but dynamic range is also reduced further.

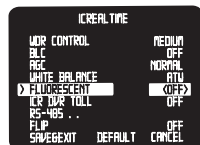

6.ICR DVR TOOL

Ideal setting with IC Realtime DVR series.

OFF : Default Setting.
EDGE SERIES : EDGE series.
MAX SERIES : MAX series.
FLEX SERIES : FLEX series.
ELITE SERIES : ELITE series.

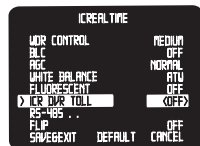

8. Functions and operation

7.RS-485..

CAMERA# : Available to set up from 1 to 255.
PROTOCOL : Supports PELCO-D.
BAUD RATE : Select a baud rate.(2400, 4800, 9600, 19200)
RETURN. : Move to MAIN MENU.

*How to control OSD menu over RS485 :

- 1) Set communication speed on the camera to 9600bps.
- 2) Accord the ID of the camera with the of the DVR or PTZ controller.

The factory default ID of the camera is CAM1.

- 3) On the DVR or PTZ controller, press 95 then press PRESET or IRIS OPEN.(95+PRESET : Set Preset)
- 4) When the MAIN MENU pops up on the screen, move the cursor Using a joystick to the desired menu to control. When entering a Sub menu, press IRIS OPEN momentarily.



8.FLIP

Adjustable to OFF, HORIZ, VERT, BOTH.

* OFF : Normal image



* HORIZ : Mirror image



* VERT : Vertical Reversal image




* BOTH : Flip over image



8. Functions and operation

9.SAVE&EXIT

Saves the current settings and exits the menu.

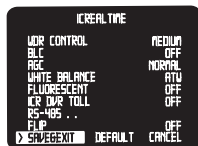

10.DEFAULT

All the settings will be restored to the factory default.
RS-485.. settings are not initialized.



11.CANCEL

Not saves the current settings and exits the menu.



9. Troubleshooting


If there are problems in operating, please refer to the checklist below. If the problem persists, please contact the agent where this product is purchased.

Problems	Troubleshooting
Nothing appears on the screen.	• Please check that the power cord and line connection between the camera and monitor are fixed properly. • Please check that you have properly connected VIDEO cable to the camera VIDEO output jack.
The image on the screen is dim.	• Is lens stained with dirt? Clean your lens with soft, clean cloth. • Set the monitor to proper condition. • If the camera is exposed to too strong light, change the camera position.
The image on the screen is dark.	• Adjust the contrast feature of the monitor. • If you have an intermediate device, set the 75Ω / Hi-Z properly (Please check the impedance)
The camera is not working properly, and the surface of the camera is hot.	• Please check that you have properly connected the camera to an appropriate power source.
Color is not correct.	• Please check the setting of WHITE BALANCE SETUP menu .

9. Troubleshooting

Problems	Troubleshooting				
RS-485 communication fails.	• Please check the polarity between RS-485 Control Port and RS-485 cable.				
	485 Control Board Connection Port			RS-485 Control Port	
	(+)-CONNECTION TERMINAL(TRX+)			485+	
	(-)-CONNECTION TERMINAL(TRX-)			485-	
	• Please check if the initial value of the RS-485 Communication setup matches between camera and OSD Controller or DVR.				
	* RS-485 Communication establishment initial value				
	Item	Camera ID	BAUD RATE	UART MODE	RET PKT
	Initial value	1	9600	8-NONE-1	ENABLE
	• We recommend that you make ground connection between camera and controller for safe communication control. • When RS-485 cable is not properly connected, Please reconnect and Reboot' is displayed. Then please turn off the power and connect the cable again.				

10. Dimension (mm)

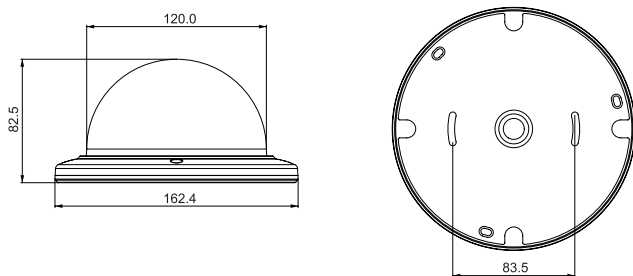

11. Specification

Model	EL-430 (I-Sniper)
Image sensor	1/3" Pixim WDR digital imaging device
Effective Pixels	410,000 pixels 758(H)X540(V)
H.Resolution	690HTVL effective.
Synchronization	Internal
Video output	1.0Vp-p Composite 75 Ohms
S/N Ratio	50dB(AGC OFF, Weight ON)
Min.Illumination	0.1Lux at F1.2
Shutter speed	1/25s ~ 1/30,720s(Global Shutter)
Gamma control	Standard $\gamma=0.45$
White Balance	2000°K ~ 11,000°K Auto. ATW / AWB selectable by OSD
Power source	DC12V / AC24V
Operating current	250mA / DC12V, 110mA / AC24V
LENS	3.3~12mm Varifocal Lens(F1.4)
Iris control	DC
Operation Temperature	-10℃ to +50℃
Humidity	0% to 90% RH
Measurement (mm)	162.4(Φ)x82.5(H)
Weight(Approx.g)	900
Function	
WDR	Low / Normal / Middle / High
AGC	Low / Normal / High
BLC	On/Off
Fluorescent	Off / CRR / CRR2
ICR DVR Tool	Off / EDGE / MAX / FLEX / ELITE
RS485	Pelco-D
Flip	Off / Horiz / Vert / Both

* Specifications are subject to change without prior notice for improvement.

