



Quick Start Guide

Singer 2

 


<https://www.icrealtime.com/>




Initialization

Step 1 Plug in the chime to a wall outlet, then after a few moments, tap the reset button to enable the Wi-Fi hotspot. The device will prompt "Wi-Fi hotspot is enabled" and the indicator light will flash green.

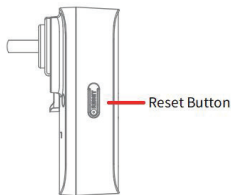

 Step 2 Download the IC View Pro app from the Android Play Store or Apple App store. Launch the app and create an account if it's the first-time use, then sign in.

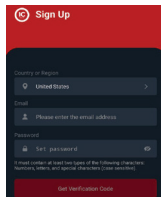


Linking to a Dinger Pro 2

This setup assumes you have added the Dinger Pro 2 video doorbell to the IC View Pro app. The Singer 2 can be bound to multiple Dinger Pro 2 doorbells at the same time.

1 On the IC View Pro app Home interface, select the Dinger 2 Pro doorbell, and then tap Device Details.



 2 Tap Chime Linkage. A list of detected wireless chimes will appear.

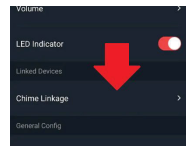

3 Select the desired chime on the list, and then tap **Save** to add.

If you do not select and link your video doorbell to a third-party chime, select the correct chime type, otherwise the device might not work properly.

Link Wireless Chime

One doorbell can be linked to multiple Wi-Fi chimes.

Singer-2



Frequently Asked Questions

How do I reset the device to factory settings?

Press and hold the reset button for about 10 seconds. The red light will turn on, then off, and you'll hear, "Device is undergoing hard reset."

What should I do if the device isn't working properly?

Try resetting the device to its default settings, then set it up again.

How do I enter Wi-Fi setup mode?

Press the reset button once. The green light will start flashing, and you'll hear, "Wi-Fi hotspot is enabled."

 
Why isn't the device online?

Check the indicator light. If it's flashing red, the device couldn't connect to the network. Make sure your router is working, the Wi-Fi credentials are correct and try reconnecting the device.

Why is the connection taking too long?

- If your phone takes too long to connect after the hotspot is turned on, the device may have time out.
- The device may begin the setup process before the app says "Waiting to connect to the network."

Know your Singer 2

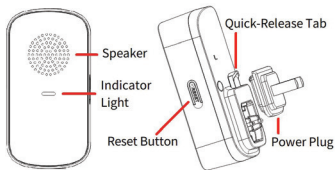

LED Indicator Status:

Flashing Blue: Hotspot Enabled
Flashing Red: WiFi disconnected
Solid Blue: Booting Up/ Online
Solid Red: Undergoing Reset

Package Contents



Singer 2



Power Adapter

 


Instruction Manual



QR Code

Step 3 Add the Device. Tap **+** at the upper-right corner on the Home page and tap SN/Scan. Scan QR code on the device or the packaging/ box to obtain the serial number, or manually enter the serial number into the app.

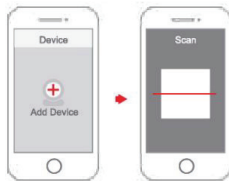

Step 4 Connect your mobile phone with hotspot. The Singer 2's hotspot Wi-Fi name should be "Singer2:xxx...xxx."

Go back to the app, and then set a password for the Singer 2. Follow the app instructions to connect to the chime.



Changing Ringtones

The Singer 2 comes with 11 different ringtones for the chime you can use in the IC View Pro app.

Tap on Device Details, then tap on Link Ringtone.

Link Ringtone

You can then select your desired ringtone from the list. Tap Save on the upper right when finished.

