


MNT-ND-MPA-3


PTZ and Multi lens mounting plate
installation guide

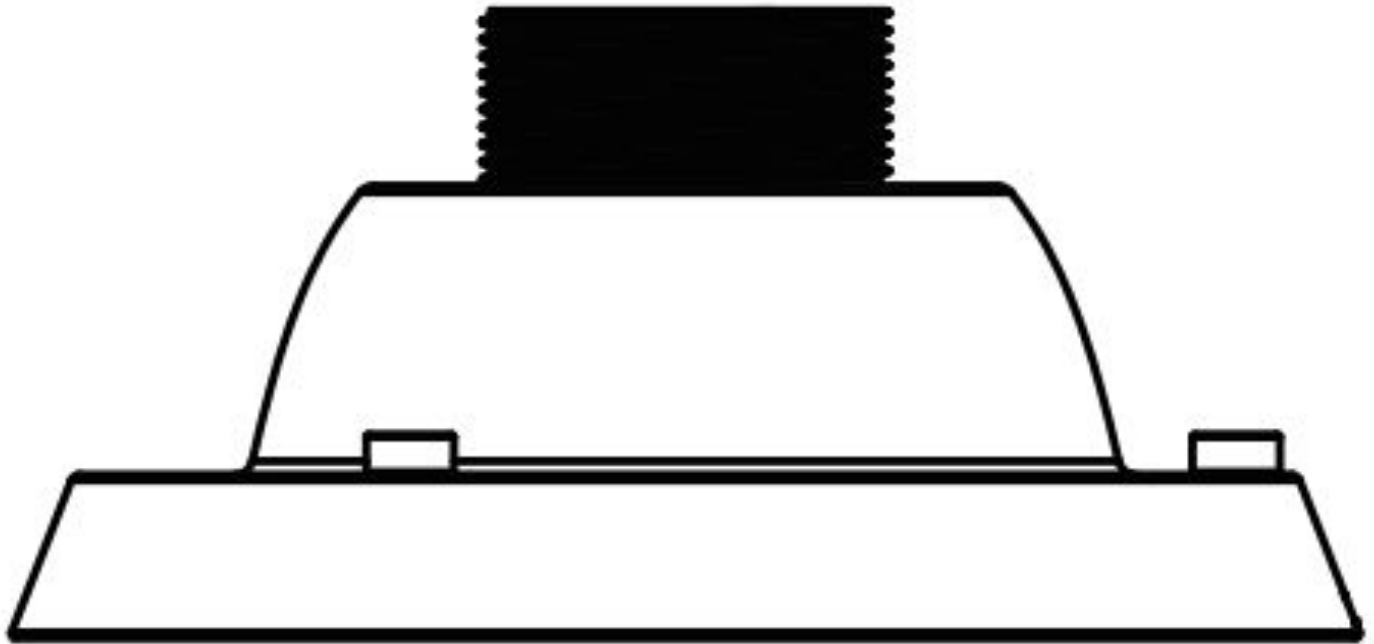

Compatible with: IPND-M80V-IRW1,
IPND-P2040X-IRW1


Mount Installation - IPND-M80V-IRW1

1. Route cables through your mounting solution and then through the adapter plate.
2. Thread the adapter plate into the 1-1/2" mount or pipe. If available, use the mount or pipe's included locking solution to secure the plate.
3. Loosen all 8 of the camera dome cover captive T10 screws. Twist the dome cover in the unlock direction, then remove the dome cover.

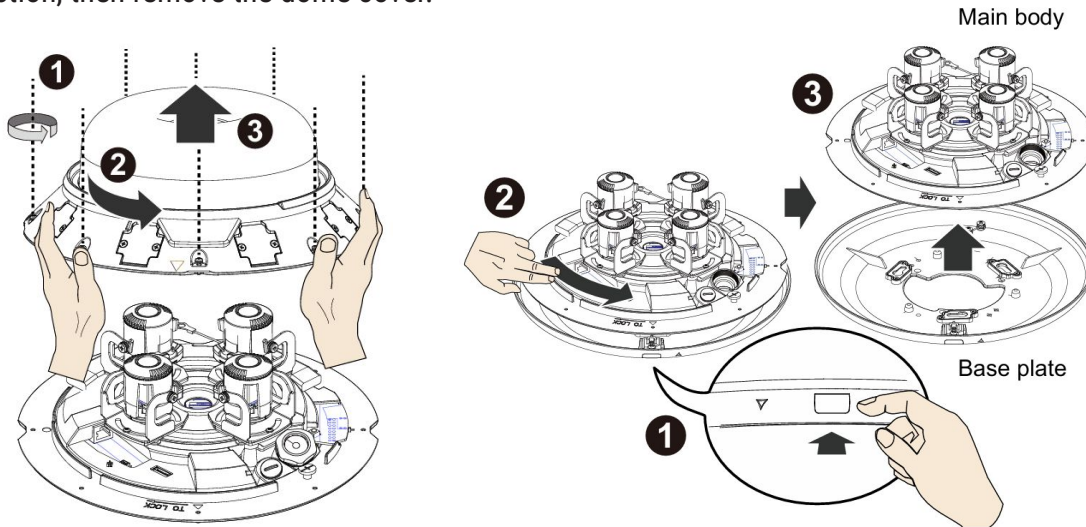


4. Press and hold the release button, located on the Base plate. Twist the camera Main body in the unlock direction, then separate the Main body from the Base plate.
5. Pass the cables through the camera Base Plate, then align the adapter plate to the camera Base Plate corresponding threaded holes. Tighten the 3 T25 screws until firmly seated.

T25

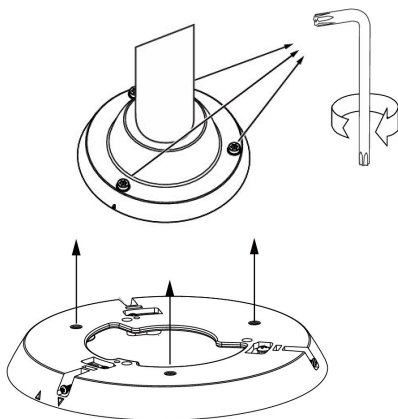


Note the front indicators indicate the default front side for the camera. Install the mounting plate with the orientation you prefer.

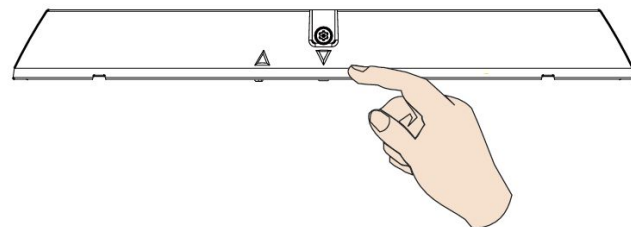


6. Latch the camera safety cable to the camera Base Plate, then route the cables into the camera Main Body and attach the camera Body to the Base plate. Connect the cables to the camera. See camera QSG for detailed instructions.
7. Proceed with initial setup: enabling network access, focus tuning, or zooming. When done, secure the outer dome cover and snap the IR shield into place.

Mount Installation - IPND-P2040X-IRW1


1. Route cables through your mounting solution and then through the adapter plate.
2. Thread the adapter plate into the 1-1/2" mount or pipe. If available, use the mount or pipe's included locking solution to secure the plate.
3. Twist the PTZ cable passthrough plate counter-clockwise to unlock, then separate the plate from the camera. Thread cables through the appropriate grommet.

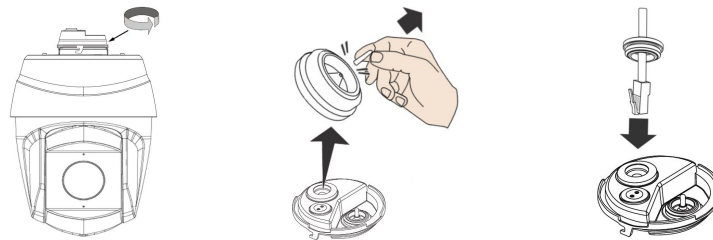

4. Latch camera safety cable. Make appropriate cable connections, then reinstall the PTZ cable passthrough plate. See camera QSG for detailed instructions.

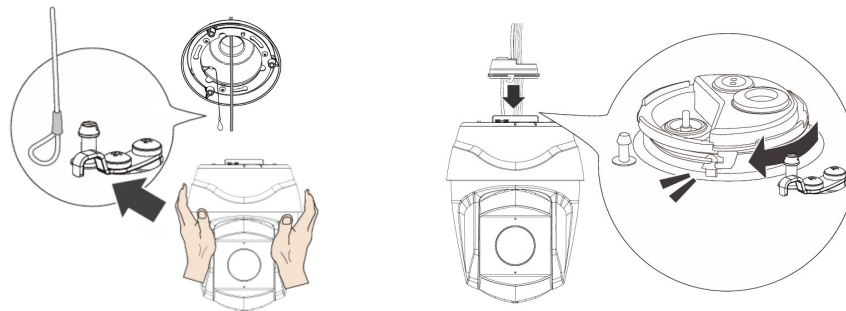

5. Locate the alignment mark on the front of the adapter plate. Align the PTZ's unlocked mark with the plate, then seat the PTZ into the plate.
6. Twist the camera body counterclockwise until the alignment mark on the plate lines up to the lock position marked on the top of the camera body.

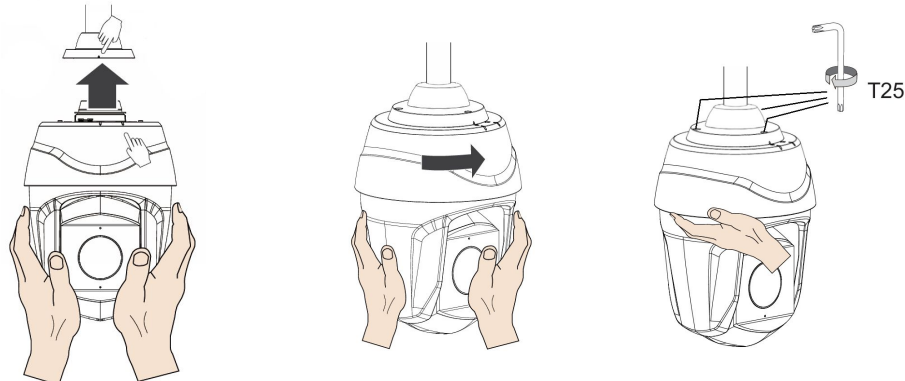

7. Tighten the 3 T25 screws until firmly seated.
8. Proceed with PTZ initial setup.